Programmes After Market Services
NSB-5 Series Transceivers

Disassembly Instructions

Issue 1 03/01
©Nokia Mobile Phones Ltd.

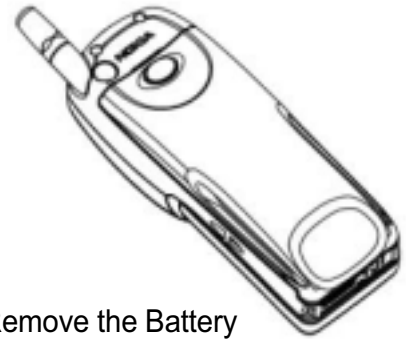

1. Remove the Battery

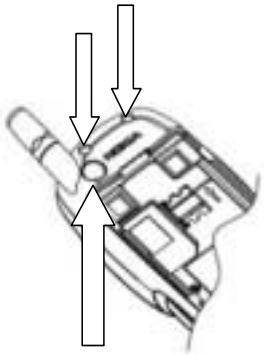

2. Remove Dust Cap & Rubber Plugs

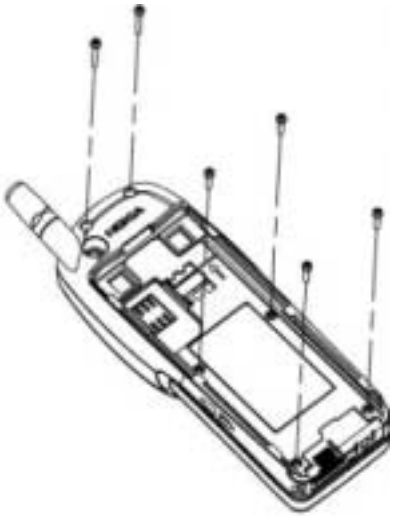

3. Remove the Screws (6x)

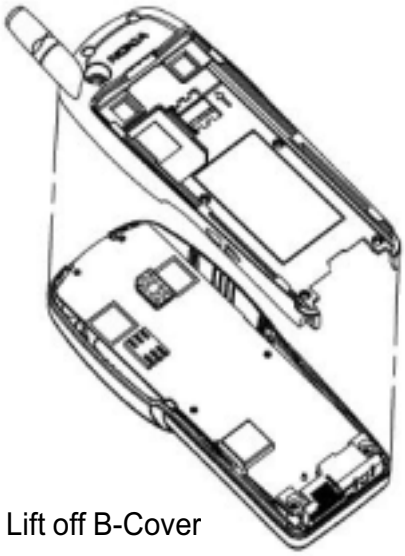

4. Lift off B-Cover

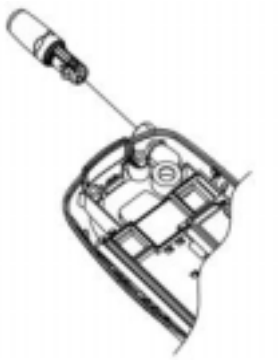

5. Pull out Antenna
note: snap fitting

©Nokia Mobile Phones Ltd.

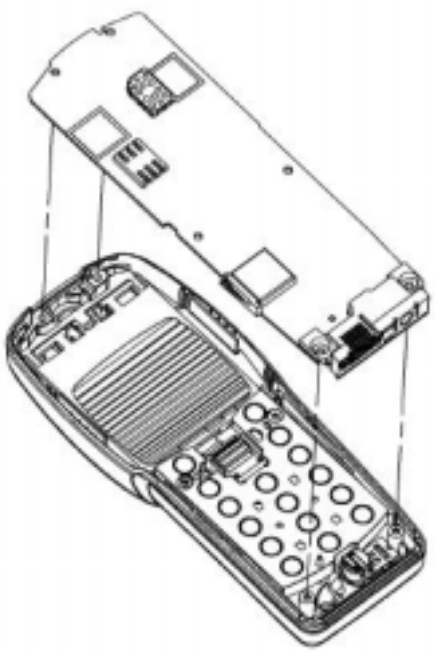

6. Lift off the PCB

7. Remove the Slide Sensor Switch

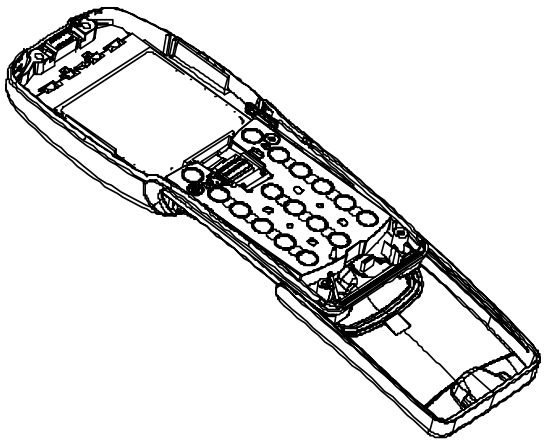

8. Pull out the Slide until the End Stop

©Nokia Mobile Phones Ltd.

10. Use a pair of Tweezers to push the Slide Stopper Spring in the direction indicated.

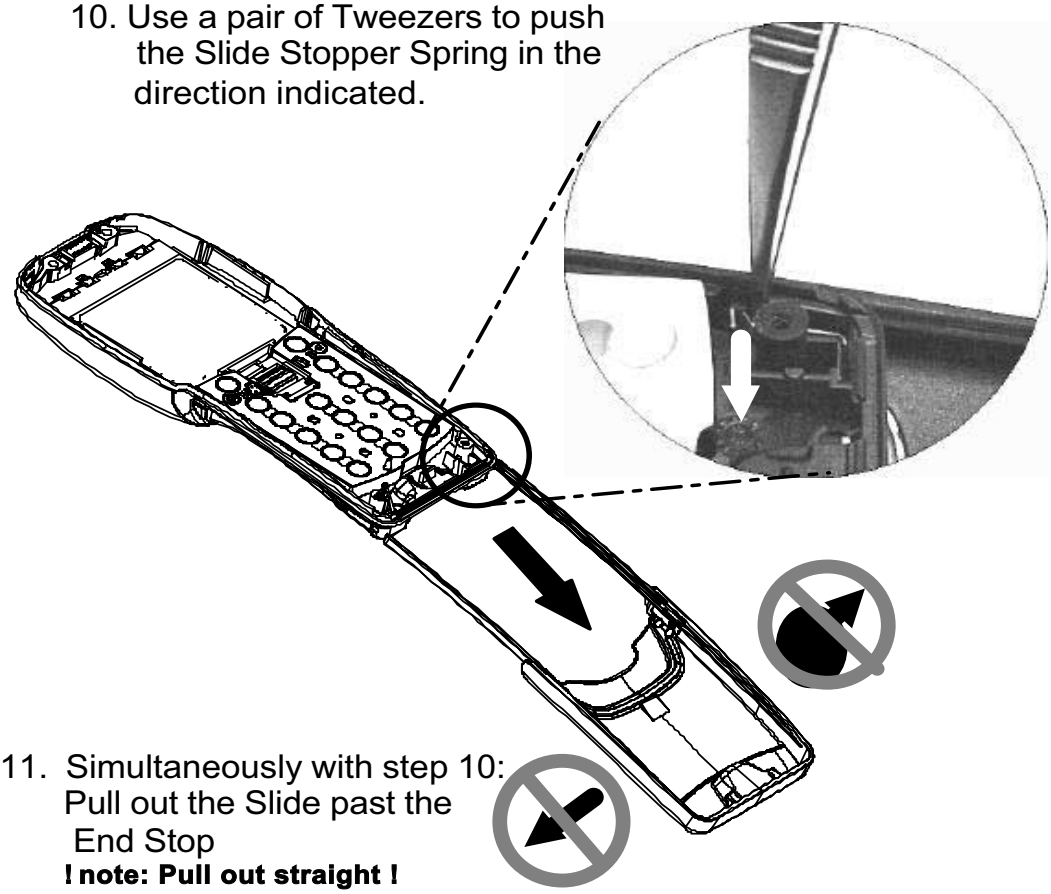

11. Simultaneously with step 10: Pull out the Slide past the End Stop

! note: Pull out straight !

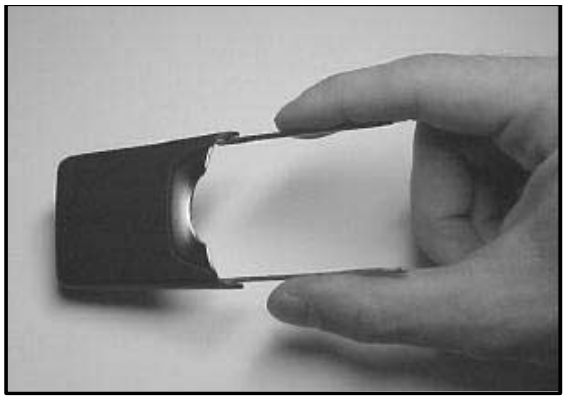

! DO NOT handle the Slide like this **!**

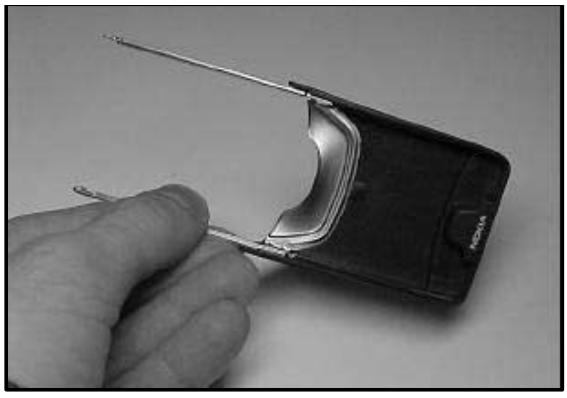

ALWAYS handle the slide like this.

The metal slide is very easily bent when it is not protected by the phone. Avoid bending of the plungers at all times.

©Nokia Mobile Phones Ltd.

12. Bend open one side of the (plastic) Slide Cover and take out the Metal Slide.

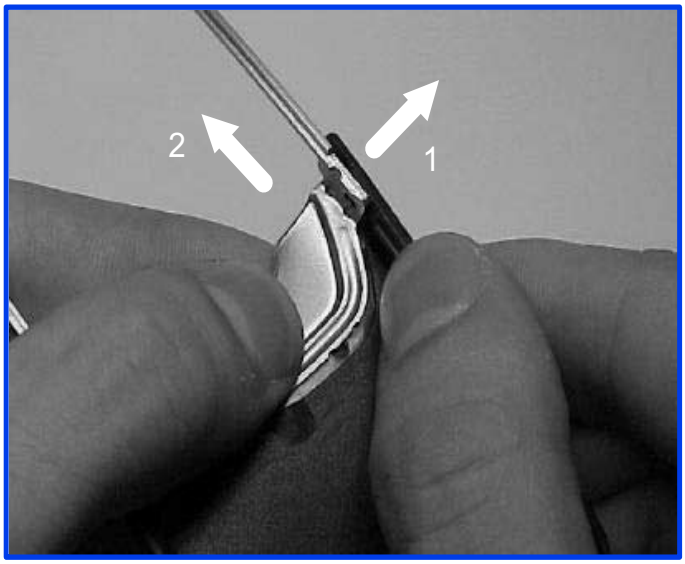

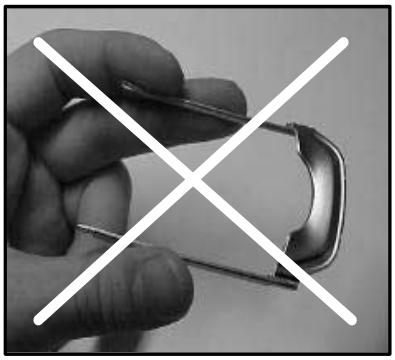

! DO NOT !
Hold the Metal Slide like this. The Metal Slide is bent very easily when not protected by the phone. Avoid bending of the Plungers at all times.

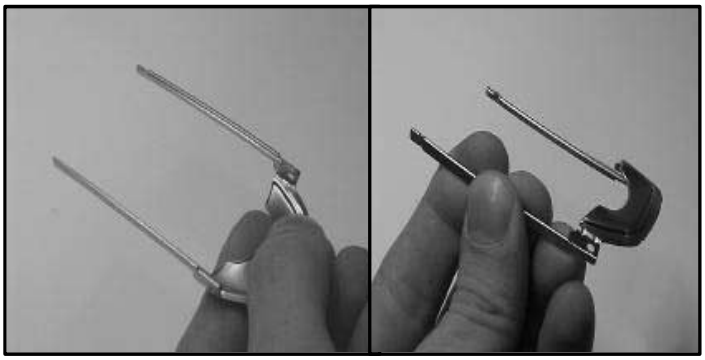

ALWAYS
Handle the Metal Slide like this.
The Metal Slide can be held by the *Targa Bow* or by one of the Plungers.

Fitting a Metal Slide onto a Slide Cover:

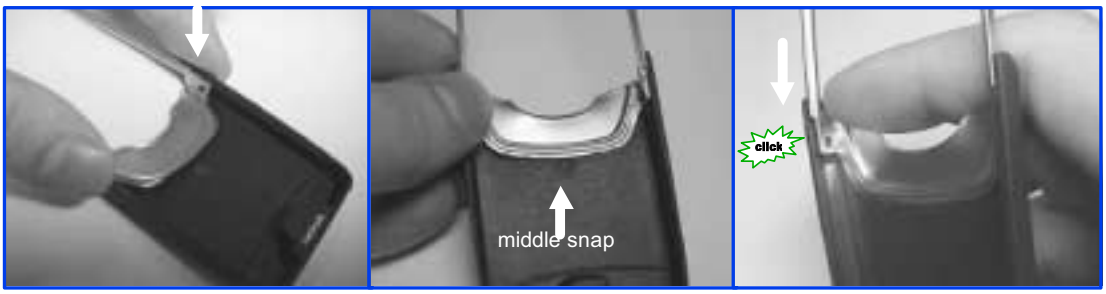

Push the Metal Slide onto the snap on one side of the Slide Cover.

Push down the other side, but do not hit the middle snap.

Push the Metal Slide onto the snap on the opposite side. A click should be noticed.

©Nokia Mobile Phones Ltd.

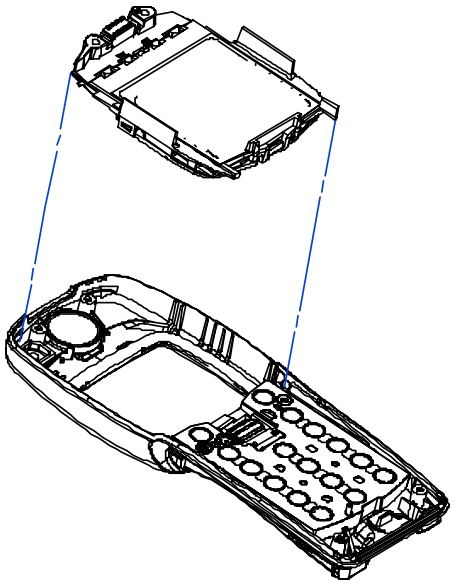

13. Remove the Display Assembly

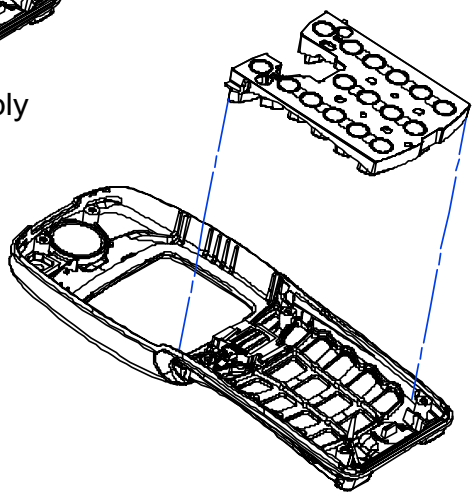

14. Remove the Keymat Module

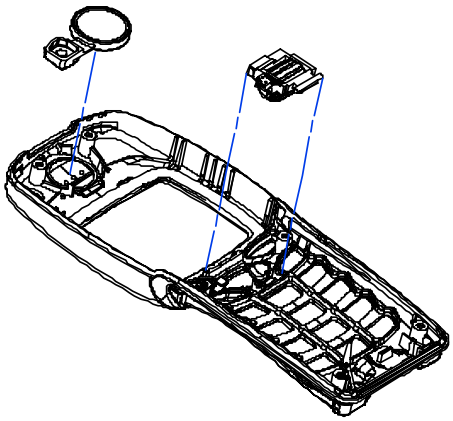

15. Remove the Speaker and the Roller Key

©Nokia Mobile Phones Ltd.